



oraimo OEB-E03D Roll Earbuds User Guide

[Home](#) » [oraimo](#) » oraimo OEB-E03D Roll Earbuds User Guide

Contents [[hide](#)]

- 1 oraimo OEB-E03D Roll Earbuds
- 2 PRODUCT OVERVIEW
- 3 Documents / Resources
- 4 Related Posts




oraimo OEB-E03D Roll Earbuds




WELCOME GUIDE

Please read this Guide carefully before using the product.

PACKAGE CONTENTS

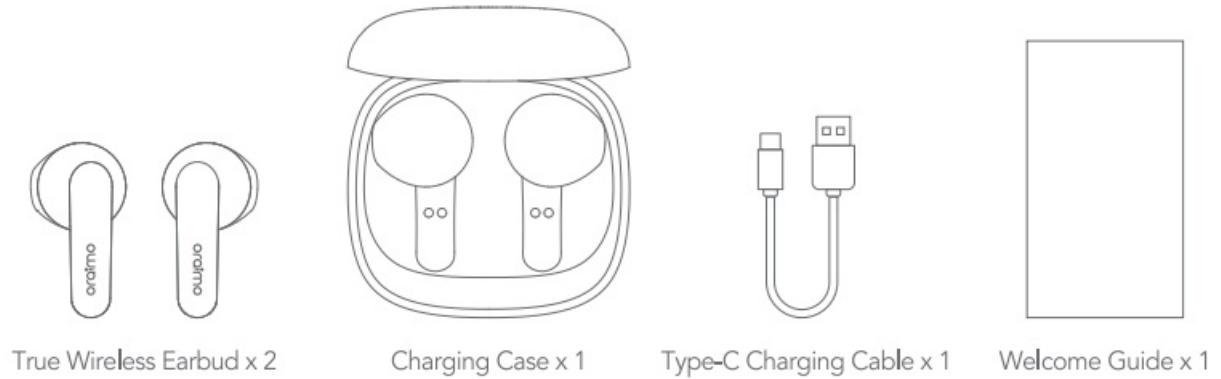

PRODUCT OVERVIEW

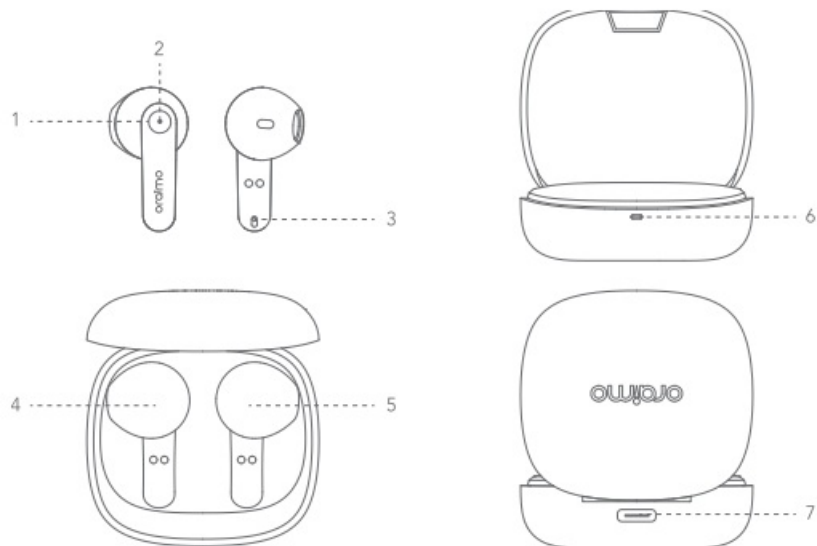

1. Multi-function Touch, Sensor
2. Earbud Status Indicator
3. Microphone
4. Left Earbud
5. Right Earbud
6. Case Status Indicator
7. Type-C Charging Port

BASIC PRODUCT SPECIFICATIONS

Earbuds

- Range: 10m
- Music playtime: Up to 4 hours on a single charge, the case provides an additional 12 hour.
- Battery capacity: 25 mAh(each earbud)

- Charging time: Approx. 1.5 hour

Charging Case


- Battery capacity: 230mAh
- Charging time: Approx. 1.5 hours

* If the charging case is fully charged, it can recharge the earbuds about 3times.


USING YOUR EARBUDS

Please fully charge the product before initial use

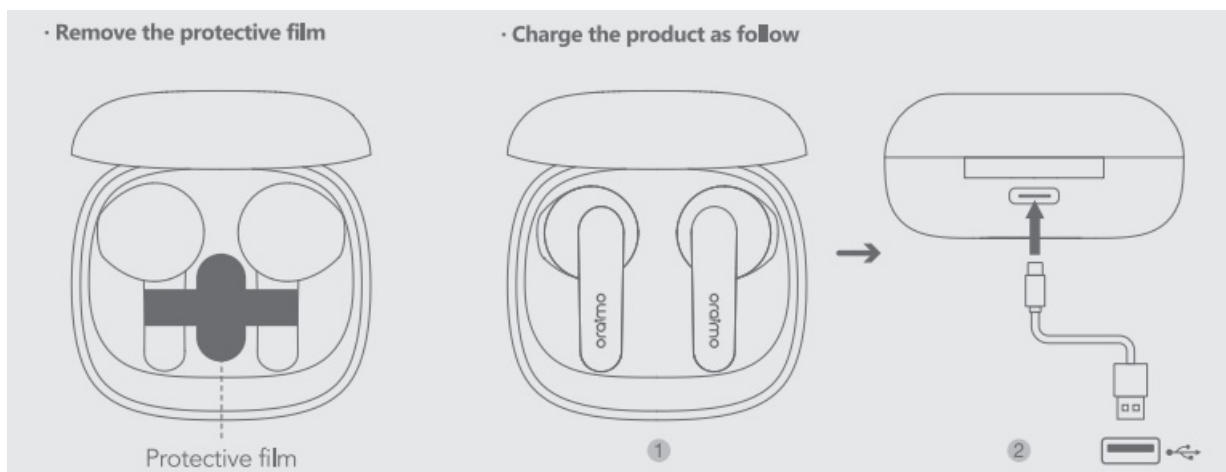


Turn on & pairing

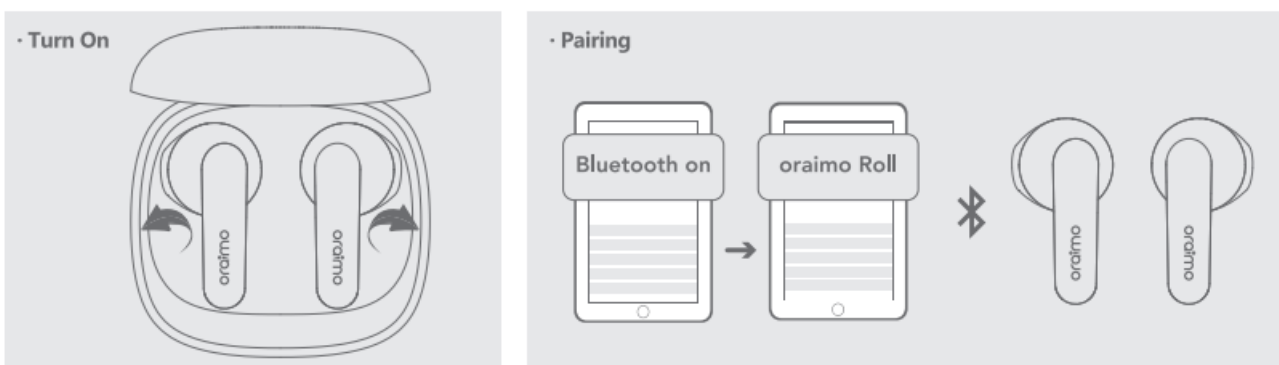

- Put the earbuds back to the charging case.
- Fully charge the case for 2 hours.



Earbuds will turn on and enter pairing mode automatically when taken out of the charging case for the first time use.

Earbud Status Indicator		Status
	Fast flashing white on both earbuds	Turn on
	Fast flashing white on left earbud, slow flashing white on right earbud	Bluetooth Pairing
	Lights off	Connected to a device

 slow flashing  Fast flashing  Lights off


- Make sure the distance of the earbuds and your device is less than 1 meter / 3.3 feet at the first time of connection.
- When turned on the earbuds will automatically connect to the last connected device if available. If not, the earbuds will pairing mode.
- Under any abnormal condition, return the earbuds to the charging case with the lid closed for 10 seconds and then take out again.
- For earbuds that have shut down and are outside the charging box, press both earbuds for 2 seconds to restart.

Turn Off

- The earbuds will automatically turn off after 3 minutes if no device is connected.
- When the earbuds are in the charging case, it will automatically turn off after being fully charged.


CHARGING YOUR EARBUDS

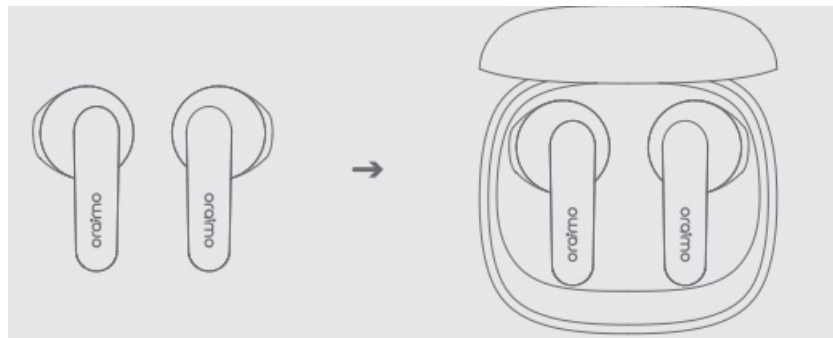

Earbuds will be charged automatically once they are returned to the charging case.



CHARGING YOUR CASE

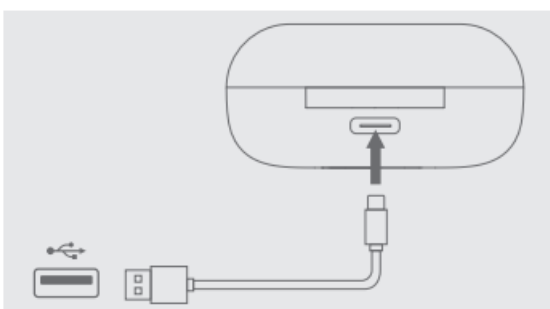Use the included Type-C charging cable to charge the case.




Case Status Indicator		Status
	Slow flashing red	Charging
	Steady red (*Lights off when you pull out the charging cable)	Fully Charged

 slow flashing  Lights on

 Use the included Type-C charging cable to charge the case.

CASE POWER LEVEL

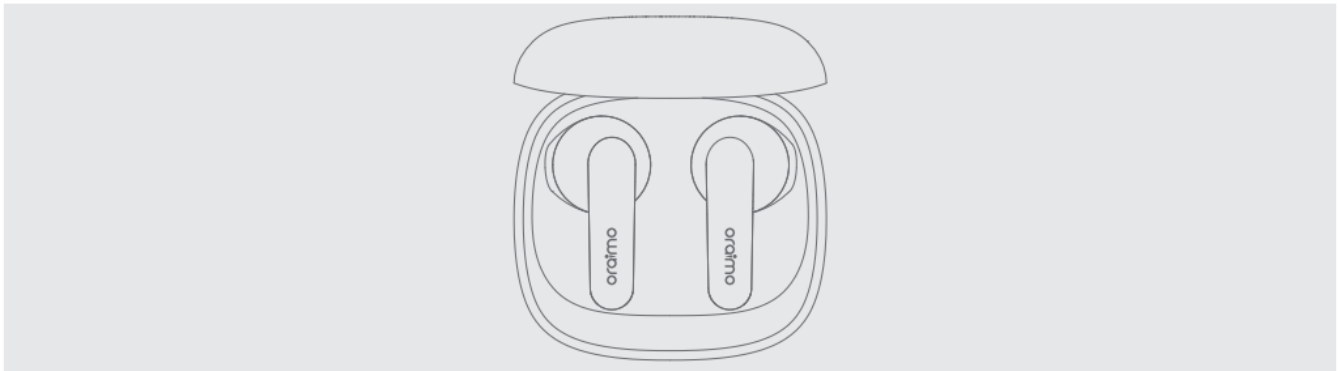








Case Status Indicator		Power Level
● → ○	Steady blue for four seconds and off	Normal
☀ → ○	Slow flashing blue for four times and off	Low

☀ slow flashing ● Lights on ○ Lights off

Put the earbuds into the charging case to check Case power level.

CONTROLS

🎵		
	Tap on one earbud twice	Play/Pause
	Tap and hold on the left earbud for two seconds	Previous track
	Tap and hold on the right earbud for two seconds	Next track
☎		
	Tap on one earbud twice	Answer/End a call
	Tap and hold on one earbud for two seconds	Reject call
Others		
	Tap one earbud for three times	Activate Voice Assistant
	Tap one earbud for four times (*please make sure both earbuds are on with Bluetooth disconnected)	Clear pairing list of the earbuds

ATTENTION

1. Use original or certified cables
2. Do not expose to liquids

3. Do not disassemble
4. Avoid dropping
5. Avoid extreme temperatures
6. Do not use the product outdoors during a thunderstorm
7. Do not use any corrosive cleaner/oil to clean.

CONSIDERATE HINTS

1. Do not turn up the volume to a fair high level constantly as this could shorten the service life of this product or impair your hearing
2. When encountering any fault during operation, please Cut off the power supply and disconnect the Type-C cable to prevent further damage to the product or other components.
3. The wireless transmission range or connectivity could be affected by low battery power. In that case, please recharge immediately.

For more, information, please visit: www.oraimo.com
or facebook: **oraimo accessories**

Documents / Resources



[oraimo OEB-E03D Roll Earbuds](#) [pdf] User Guide
OEB-E03D-R, OEBE03DR, 2AXYP-OEB-E03D-R, 2AXYPOEBE03DR, OEB-E03D Roll Earbuds, Roll Earbuds, Earbuds